



motorola
SoundPilot™

Bluetooth™ Stereo Headphones and Controller



MOTOSTART
Got connected in 6 quick steps.

S705



BEFORE YOU BEGIN

Before using this product, read the Important Safety and Legal Information in the user's guide and follow its instructions.

Take a moment before you get started to familiarize yourself with your new S705 Bluetooth Stereo Headphones and Controller.

 


④ CONNECT TO NON-PHONE MUSIC DEVICE

Establish connection between your S705 and your Bluetooth (non-phone) music device:

Step A - PUT YOUR S705 IN PAIRING MODE

- 1 On your S705, press Menu button to access menus.
- 2 Move down on joystick until you see **Find Me** displayed.
- 3 Move right on joystick to place S705 in Bluetooth discoverable mode. If connected to phone, you see **Disconnected?** displayed first.
- 4 Move right to disconnect from phone. You see the following:



The S705 is placed in Bluetooth discoverable (pairing) mode for 3 minutes.

① CHARGE

Charge your S705's battery for 2 hours:



- 1 Plug the Motorola charger into the charging port on the bottom of the S705.

The backlight turns on when the battery is charging and the device is turned off. When the S705's battery is fully charged (about 2 hours), the backlight turns off.

- 2 Disconnect the charger.

② CONNECT TO PHONE


Establish connection between your S705 and your Bluetooth phone:

Step A - PUT YOUR S705 IN PAIRING MODE

Note: The S705 is a Class 1-capable Bluetooth device. Bluetooth features and Bluetooth Class 1 power levels are not allowed for outdoor operation in France. To avoid unlawful interference with radio signals, do not use the Bluetooth features in France unless you are indoors.

With your S705 powered off, press and hold the Menu button for at least 3 seconds until the Motorola logo displays.

After the Motorola logo displays, you see the following:

 

The S705 is placed in Bluetooth discoverable (pairing) mode for 3 minutes.

⑤ TEST AND USE STREAMING MUSIC

To confirm proper streaming music operation:

- 1 Plug headphones into your S705, then place earbuds into your ears.
- 2 Play music from your streaming music source.

If your music source and S705 are successfully paired and connected for streaming music, you will hear music on your attached headphones.

After successfully pairing and connecting your phone or music device and S705, you don't need to repeat these steps. For daily use, ensure that your S705 is turned ON and that your phone's Bluetooth feature is ON.

Step B - SET YOUR PHONE TO LOOK FOR YOUR S705

For most Motorola phones:

- 1 Turn on the Bluetooth feature on your phone (if not already on—it is turned off by default).
- 2 Press **[Menu]**, **Settings** > **Connection** > **Bluetooth Link** > **Handsfree** > **Look for Devices**. The phone lists Bluetooth devices it finds.
- 3 Select **Motorola S705**.
- 4 Select **OK** or **Yes** to pair your S705 with your phone.
- 5 Enter the passkey: **0000**
- 6 Select **OK**.

When your S705 successfully pairs and connects with your phone, a Handsfree Phone Connected (H) icon is shown in the upper right of your S705's display. (A Streaming Music Connected (J) icon may also be displayed if your phone supports Bluetooth streaming music.)

Note: These steps are for most Motorola phones. For other phones, see your phone's user's guide for details on using Bluetooth.

⑥ RECONNECT TO PHONE

To use your S705 with your phone and non-phone music device, you may need to reestablish the Bluetooth connection with your phone (if it was disconnected during step 4). To do this, turn your S705 off, wait 5 seconds, then turn your S705 on.

When powered up, both the Handsfree Phone Connected (H) and Streaming Music Connected (J) icons are shown in the upper right of your S705's display to indicate successful connections to your Bluetooth phone and/or music device.

You are ready to begin using your S705!

For details on S705 operation, see the user's guide.

③ TEST AND USE HANDSFREE CALLING

Your phone and S705 are now connected and ready to make and receive handsfree calls.

To confirm proper handsfree calling operation:

- 1 Plug headphones into your S705, then place earbuds into your ears.
- 2 Dial a number using the phone handset. You hear dialing tones on your attached headphones. (Ensure volume is adequately set on S705 by moving joystick up or down.)
- 3 Press Send key on the phone. If your phone and S705 are successfully paired and connected for handsfree calling, you will hear ringing on your attached headphones.

After successfully pairing and connecting your phone with your S705, you don't need to repeat pairing (step 2) the next time. For daily use, ensure that your S705 is turned ON and that your phone's Bluetooth feature is ON.

If using your phone as your streaming music source, skip to step 5 to test and use.

TROUBLESHOOTING

My phone/music device doesn't find my S705. Make sure the S705 displays the discoverable mode screen when your phone/music device is searching for devices (see step 2 for phone or step 4 for music device). To display the discoverable mode screen, press the Menu button to access menus, move down on joystick until **Find Me** is displayed, and move right on joystick to place S705 in discoverable (pairing) mode.

My S705 worked before but now it's not working.

Make sure your phone/music device is on and the Bluetooth feature is turned on. If the Bluetooth feature was turned off (or was turned on only temporarily), you may need to restart the Bluetooth feature. If restarting the Bluetooth feature does not restore your connection, you need to pair your phone/music device and S705 again (see step 2 for phone or step 4 for music device).

Support

If you need more help, contact us at **1-877-MOTOBLU** or visit us at www.hellomoto.com/BluetoothSupport.

Motorola, Inc.
Consumer Advocacy Office
1307 East Algonquin Road
Schaumburg, IL 60196

www.hellomoto.com
1-877-MOTOBLU
1-888-390-6456 (TTY/TDD United States for hearing impaired)

MOTOROLA and the Stylized M Logo are trademarks in the US owned by Motorola Inc. All other marks, logos, and the discoverable mode screen may be trademarks or registered trademarks, always obey the law and copyright notices of their producer. The Bluetooth trademarks are owned by their proprietor and used by Motorola Inc. under license. Symbols and trademarks of Motorola Inc. are used for identification purposes only. Motorola Inc. has no liability for any damage or loss of data resulting from the use of this product.

© Motorola Inc. 2007